



# beebop

WIRELESS HEADPHONES

## USER GUIDE

Beebop Wireless Headphones

Wireless range up to 25 feet

### What's in the box?

(1) Beebop Wireless Headphones

(1) USB Charging Cable

(1) Quick Start Guide

### Basics

- Hold down the PHONE button to turn the device on/off
- To pair your Beebop wirelessly, look for "OrigAudio\_HP"
- To charge your Beebop, connect your USB charging Cable into a wall-adaptor as if you are charging your phone

### Button Features and Definitions

- Press the PHONE button to play or pause music.
  - Press the UP button to restart your current song or to return to your previous song.
  - Press the DOWN button to skip to the next song.
  - Hold the UP button to increase volume. You will hear a beeping noise when you have reached max volume.
- RETURN to the previous song
- Hold the DOWN button to decrease volume.

### To Use During a Phonecall:

- Use your phone to dial a number as usual. To start a call with the last dialed number, tap the PHONE button twice.
- To answer a call with the Beebop, press the PHONE button. Use the UP or DOWN button to change volume settings.
- To end a call with the Beebop, press the PHONE button.

