



# Boxanne

## WIRELESS SPEAKER

### Product Features

- Wireless functionality with 33 foot range
- Built-in microphone for calls
- One-touch call answering capability
- Up to 5 Hours of playtime off a single charge
- Built-in rechargeable battery
- Soft-touch rubber exterior with comfortable feel
- AUX 3.5 mm audio input
- Compatible with smart phones and other media player devices

### Power ON/OFF

On the side of Boxanne, slide the power button to ON and a blue LED will flash to indicate that the device is ON. Slide the power button to OFF, the blue LED will turn off.

### Direct Audio Connection (Non-Wireless)

Once the device is turned ON, insert the audio cable into your music device and the other end into the AUX IN port on the side of Boxanne. The blue LED light will flash to indicate that the device is connected and you can begin playing music.

### Wireless Connection

When Boxanne is turned ON, it will be automatically discoverable by your wireless capable devices. Select "BOXANNE" from your list of devices. Boxanne will indicate a successful wireless pairing by changing from a steady flashing blue LED light to slow flashing blue LED light (once every 3 seconds). Once your device is connected, the speaker will pair automatically until you manually disconnect it. Boxanne will automatically power off within 13 minutes if no devices are paired.

### Buttons

#### Play // Pause

Press the play button once to play music. Press the play button again to pause your music.

#### Next + // Back -

Press the next + button to skip to the next song. Press back - button to return to the previous song.

#### Volume Control


Hold down the next + to increase the volume of the speaker. Hold down the back - button to decrease the volume of the speaker.

### Charging

When Boxanne is low on power, connect the micro-USB port with the charging cable and its USB plug into a USB port with power on the other end.

### Once-Touch Call Answering

When Boxanne is connected to your wireless phone and you receive a phone call, answer with one touch by pushing the play button once. To ignore the phone call, quickly press the button twice. Disconnect from your call by selecting the same button.

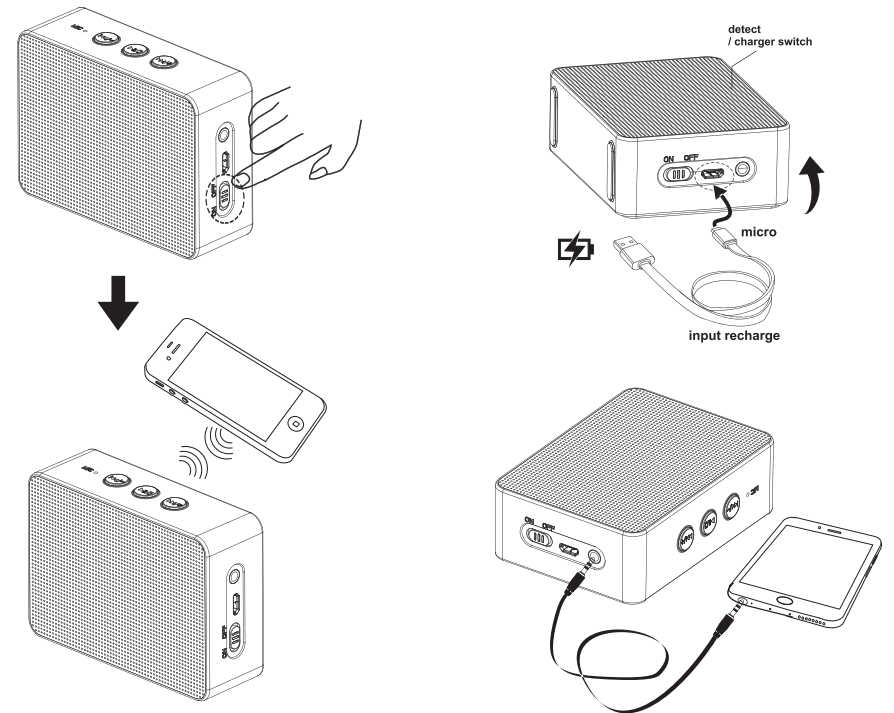

### Specifications

Dim: W 2.6 x H 1.3 x L 3.7 in

Weight: 0.3 lbs.

Wireless Connection: v2.1+EDR; Class II

Wireless Connection Distance: 30 ft.

Frequency Response (0dB at 1KHz); 100Hz-20kHz

Amplifier Max Output; 3W (THD=10%,1KHz@0dB)

Operation Voltage; min 3.2V max 4.2V DC

Battery Charge Voltage; typ.5V;max.5.5V DC

Battery Charge Current: 300-500mA Max

Battery Charge Time; 2.5 hours

Playback Time; 4 to 5 hours

Battery Capacity; 400mAH

Cell type; 3.7V Li Rechargeable Battery

SEE MORE AT:  
[WWW.ORIGAUDIO.COM](http://WWW.ORIGAUDIO.COM)