

Inflatable Stool

Product Parts

- 1 - Base
- 2 - Inflatable Structure
- 3 - Graphic



Setup

Step 1

 
 
Partially inflate the Inflatable Structure (2)
(Optional pump sold separately.)

Step 2

With the valve of the Inflatable Structure (2) towards the ground place the Graphic (3) over it.

Step 3

Sandwich the Base (1) between the bottom of the Graphic (3) and the bottom of the Inflatable Structure (2) while placing the valve through the hole in the Base (1)

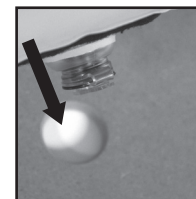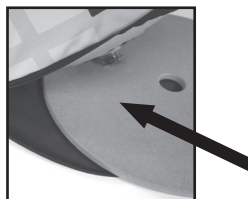

Step 4

Zip closed. Inflate to desired firmness. Close the valve.

***DO NOT OVER INFLATE**

Storage & Care

Store in a cool dry location. Recommended for indoor use only.

Machine wash graphic, gentle cycle, air dry. **DO NOT DRY CLEAN.** Steam out wrinkles