

Inversion Hanging Retractor

24", 36", 48"

Product Parts

- 1 - Retractor Base
- 2 - Snap Banner Rail
- 3 - Key



Display Set-Up


Step 1

Using the two attached rings on base securely mount your Inversion Hanging Banner in desired location. We recommend medium strength wire (not included). Mount your hardware a minimum of 72 inches (6 feet) from floor.

Step 3


To retract graphic back into Retractor Base (1) give a quick downward tug on ring. This motion is similar to retracting a window shade.

Gently guide the banner back into the Base to avoid damage.

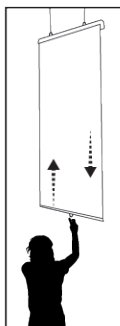

Step 2

Using attached ring on Snap Rail (2) gently pull graphic out of Retractor Base (1) to desired length.

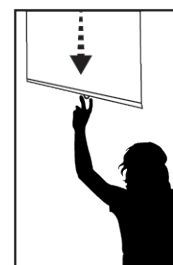

Banner Install/Replacement ONLY

Step 1

Remove both End Caps from the Snap Banner Rail (2) and snap the clamp open. Fully insert the top edge of the banner into the groove of the Snap Banner Rail and snap it closed.




Step 3

With graphic facing up and Retractor Base (1) nearest you, remove cover on right side. Fully insert Key (3) into key slot and turn in direction of arrow. It takes several turns to build enough tension to get graphic to pull into Retractor Base. Use your other hand to evenly guide the graphic, while still turning the Key slowly, allowing graphic to fully enter the Retractor Base. Remove the key, then replace the cover.




Left Side

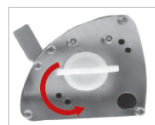

Right Side
Key slot

Step 2

Lay the banner flat, printed side down. Firmly and evenly press the hook of the leader onto the loop on the banner.

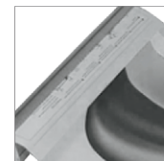

Storage & Care

Place all product parts into Carry Case and store in a cool dry location. To clean non-graphic hardware, wipe with a damp cloth.