

# SHOCKWAVE

2 in 1 WIRELESS PORTABLE SPEAKER AND  
5200mAh EXTERNAL BATTERY PACK

## USER MANUAL

### CHARGING THE SHOCKWAVE:

- Before the first use, fully charge the Shockwave by connecting the provided micro-USB cable from the Shockwave to a PC or other USB charging device.
- The Shockwave's four blue LEDs along the side will light up in sequence to represent charging. Once fully charged, all four LEDs will remain lit solid blue.

### PLAYING AUDIO FOR THE FIRST TIME:

- Press and hold the large “B” button for three seconds to turn on the speaker. An audio jingle will play to signal that the Shockwave is initializing. A blue LED will flash to signal that the Shockwave is searching for a pairable device.
- From your mobile device, turn the Bluetooth function on and search for the device named “Shockwave.” Click on the name to connect. An audio jingle will play to let you know that the Shockwave and your device have successfully paired.
- Play music or other audio (podcasts, phone calls, etc.) from your mobile device. To control the volume, adjust levels directly from your mobile device.
- To power off, press and hold the large “B” button again for three seconds until the audio jingle sounds and the blue LED turns off.

### CONTROLLING MUSIC PLAYBACK VIA THE SHOCKWAVE:

- The Shockwave has its own volume controls next to the input and output ports on the back of the unit—this determines the master volume of the Shockwave.
- For the best sound, tap the [>>+] button until the audio bleep notifies that you are at maximum volume. Then continue to adjust the volume levels from your mobile device. You can also press the [<<-] button to reduce the volume.

### SKIPPING TRACKS (FORWARD AND BACK)

- Simply hold [>>+] or [<<-] to skip forward and backward one track at a time.



## ATTENTION

- Do not expose the Shockwave to water or moisture. It's multifunction capabilities extends to being a speaker and battery pack only. It does not include growing gills or swimming.
- Avoid extreme temperatures, humidity, and direct sunlight.
- It seems like this should go without say, but just in case—we're saying it: Do not modify, take apart or pierce the battery with a nail or other sharp objects.
- Do not directly connect both the input and output as doing so will cause the Shockwave to break down. And no body wants that.
- If the Shockwave begins to operate abnormally, discontinue use.
- Once the Shockwave has come to the end of its lifespan (since all things in life come to an end), dispose of it responsibly.
- Bring your spent batteries to an approved recycling center for proper battery disposal because mother nature is watching.
- Be sure to follow the operating instructions outlined in this manual so that the warranty/guarantee remains valid! Misuse of the Shockwave may cause personal injury and/or property damage in which we are not liable for.

## 2 in 1 WIRELESS PORTABLE SPEAKER + EXTERNAL BATTERY PACK

### SPECIFICATIONS

Dimensions:	1.93 x 4.96 x 2.28 in
Product Weight:	0.53 lbs
Battery Capacity:	5200mAh
Input:	5V≤2100mA
Output:	5V≤2100mA
Recharge Time:	≥3 hours

Wireless Connection:	up to 33 ft.
Frequency Response:	100Hz-20kHz
Total Harmonic Distortion:	1%
Power RMS:	3W
Speaker Driver Size:	1.57 in
Playback Time:	up to 40 hours



40 HR PLAYBACK



MICROPHONE



BATTERY

*Origaudio™*



RoHS



ORIGAUDIO.COM